

# BöttcherFount H-2005

## Fountain Solution Additive for Alcohol Reduction

---

BöttcherFount H-2005 is a fountain solution additive for IPA-free printing in heatset and continuous form printing.

*Application*

- 
- Standard dosage 2 – 3%
  - For IPA-free printing
  - Very stable ink- / water balance
  - fast restarts and stable printing for long runs
  - for water hardness 5 – 15° dH (total hardness)
  - pH-value 4.69 – 4.79 at dosage of 2-3% (according to water hardness)
  - reduced calcium deposits on ink rollers
  - minimizes accumulation of paper dust and ink on the blanket
  - reduced ink feedback into the dampening system
  - reduced ink misting
  - increased conductivity per % input: 370  $\mu\text{S}/\text{cm}$
  - density 1.105 (kg/l)


*Features*

---

Before applying BöttcherFount H-2005, the fountain System must be completely emptied and cleaned thorough, preferably with BöttcherPro Slimex. The more the Isopropyl alcohol content is reduced, ink feed-back and debris will increase and accumulate in the fount circulation system. Therefore, we recommend the fountain solution to be changed regularly, e.g. every 2-3 weeks.

*Note*

BöttcherFount H-2005 meets the requirements of the “Corrosion Certificate of Fountain Additive”, approved by press manufacturers.

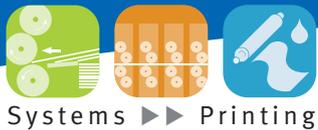

- 200 kg drum
- 600 kg container
- 1.000 kg container

Package

BöttcherFount H-2005 is classified and marked in accordance with EC-Directive 1999/45/EC – in its latest version. BöttcherFount H-2005 is not a dangerous good in the sense of national and international transport regulations.

Marking

All our product information's you will find in the internet on [www.boettcher-systems.com](http://www.boettcher-systems.com)

**Germany**  
Phone +49 221 4907-1  
Fax +49 221 4907-420  
koeln@boettcher-systems.com

**Argentina**  
Phone +54 23 22 466 200  
Fax +54 23 22 496 951  
aschwald@boettcher-systems.com.ar

**Australia**  
Phone +61 2 96 59 27 22  
Fax +61 2 96 59 27 44  
info-aus@boettcher-systems.com

**Austria**  
Phone +43 223 686 070 1  
Fax +43 223 686 070 150  
office@boettcher.at

**Brazil**  
Phone +55 11 26 18 18 66  
Fax +55 11 26 18 18 66  
fabio@boettcher.com.br

**Baltic States**  
Phone +8 90336147074381  
Fax +8 90336147074271  
baltic@boettcher-systems.com

**Canada**  
Phone +1 905 612 07 38  
Fax +1 905 612 81 27  
bob.nixon@boettcher-systems.com

**China - Suzhou**  
Phone +86 51262003800  
Fax +1 86 51262007557  
boettcher@boettcher-systems.com

**China - Suzhou**  
Phone +86 51262003800  
Fax +1 86 51262007557  
guzhou@boettcher-systems.com

**Czech Republic**  
Phone +420 226783265 11  
Fax +420 226783217 18  
boettcher@boettcher-systems.com

**Denmark**  
Phone +45 7642603050  
Fax +45 7642603970  
info@boettcher-systems.com

**Great Britain**  
Phone +44 1840426500  
Fax +44 18404268078  
info@boettcher-systems.com

**Hong Kong**  
Phone +85 23041213 00  
Fax +85 23041216 78  
sales@boettcher-systems.com

**Hungary**  
Phone +36 225438 50  
Fax +36 225438 55  
boettcher@boettcher.com

**Indonesia**  
Phone +62 22 48 88 29 96  
Fax +62 22 48 88 89 54  
ferdinand@boettcher-systems.com

**Italy**  
Phone +39 02 488379 36  
Fax +39 02 488379 42  
boettcher@boettcher-systems.com

**Japan**  
Phone +81 32647 67101  
Fax +81 32647 673142  
toyohara@boettcher-systems.com

**Lithuania**  
Phone +81 3 36 47 64 01  
Fax +81 3 36 47 64 11  
boettcher@boettcher.co.jp

**Malaysia**  
Phone +60 3 80 62 20 42  
Fax +60 3 80 62 42 03  
meishin@boettcher.com.my

**Mexico**  
Phone +52 55 56 57 72 93  
Fax +52 55 56 57 94 19  
enrique.iturbe@boettcher-systems.com

**Middle East**  
Phone +971 44 22 79 84  
Fax +971 44 22 76 94  
pius.marokky@boettcher.ae

**Netherlands**  
Phone +31 416 69 71 90  
Fax +31 416 69 73 59  
service@boettcher.nl

**Poland**  
Phone +48 22 731 61 10  
Fax +48 22 731 61 11  
office.pl@boettcher-systems.com

**Russia**  
Phone +7 495 662 30 93  
Fax +7 495 662 30 94  
moscow@boettcher-systems.com

**Singapore**  
Phone +65 64 63 21 31  
Fax +65 64 63 11 31  
boettcher@singnet.com.sg

**Republic of Slovakia**  
Phone +421 263 813 624  
Fax +421 263 81 36 25  
boettcher@boettcher.sk

**South Korea**  
Phone +82 31 907 67 81  
Fax +82 31 907 67 86  
cjpark@boettcher.co.kr

**Spain**  
Phone +34 91 885 95 77  
Fax +34 91 885 92 68  
ventas@boettcher-systems.com

**Sweden**  
Phone +46 565 165 70  
Fax +46 565 165 80  
info@boettcher.se

**Switzerland**  
Phone +41 41 784 11 11  
Fax +41 41 784 11 12  
office.ch@boettcher-systems.com

**Taiwan**  
Phone +886 282 286 848  
Fax +886 282 286 849  
barry.mao@boettcher.com.tw

**Thailand**  
Phone +66 38 57 16 00  
Fax +66 38 57 16 08  
anurux.sasasmit@boettcher-systems.com

**Turkey**  
Phone +90 212 659 93 38  
Fax +90 212 659 93 40  
ozan.karaca@boettcher-systems.com

**Ukraine**  
Phone +38 44 513 80 09  
Fax +38 44 513 98 38  
office@boettcher.ua

**USA**  
Phone +1 410 273 70 00  
Fax +1 410 273 71 74 74  
david.dinsmore@boettcher-systems.com

The purpose of these technical data is to assist our customers. We list general experience and laboratory test. Translation of these to actual applications is, however, subject to a variety of factors which are beyond our control. We ask for understanding that claims can't be based upon them.